


**NAPCO**




**OPERATING GUIDE FOR THE  
MAGNUM ALERT 1008 AND  
MAGNUM ALERT 1010 SERIES  
ALARM CONTROL PANELS**

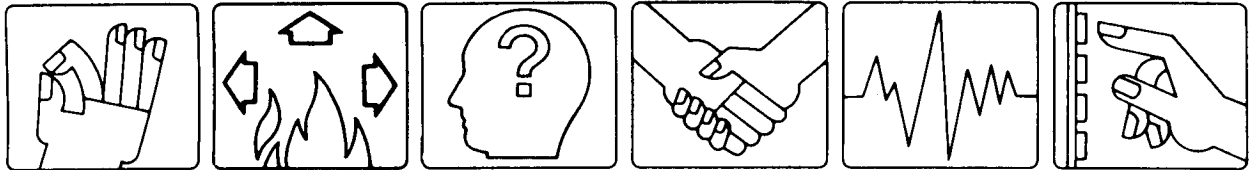

**CONGRATULATIONS!**

on your purchase of a NAPCO alarm control panel. Your Magnum Alert security system has the comprehensive features and ease of operation consistent with NAPCO's reputation for quality and value.

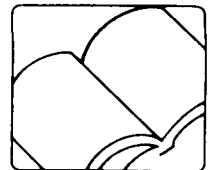

Your new installation is a sophisticated warning system with many available features. Your alarm specialist will explain your system and show you how it works. Contact him should questions concerning operation arise.



This booklet contains important information about the operation of your system. Read it carefully and keep it handy for future reference. Check the Glossary for an explanation of terms that may be unfamiliar to you.

Please read this guide thoroughly to familiarize yourself with your new security system. Check the Glossary on pages 3-4 for any terms that may be unfamiliar to you. Keep this booklet handy for future reference. Note especially the ALARM PLAN on page 15. Your alarm specialist will help you fill it out and explain the various system features and operating procedures.

**NOTE:**

You'll probably find items mentioned in this booklet which do not apply to your system. Magnum Alert 1008-Series (8-zone) and 1010-Series (10-zone) control panels have such a wide variety of features that few, if any, security systems will ever need them all. Your alarm professional has chosen appropriate features for your situation. Ask him about them.

Your system has been carefully designed and engineered to the highest industry standards. To assure optimum safety and security, familiarize yourself with this equipment and periodically check its condition and state of readiness.

**TABLE OF CONTENTS**

GLOSSARY.....	3
KEYPAD CONTROLS & INDICATORS.....	5
HOLD-DOWN FUNCTIONS.....	6
SELECTING AND PROGRAMMING YOUR CODES.....	8
SETTING THE ALARM (ARMING) WHEN LEAVING.....	9
TURNING OFF THE ALARM (DISARMING) WHEN RETURNING.....	10
PROTECTING YOURSELF WHILE ON THE PREMISES.....	11
CENTRAL-STATION MONITORING.....	12
FIRE PROTECTION.....	13
ALARM PLAN.....	15

**REMEMBER: TO SHUT OFF AN ALARM WHILE ARMED, ENTER YOUR CODE!**

SERVICE: \_\_\_\_\_

CENTRAL STATION: \_\_\_\_\_

## GLOSSARY

**Abort Delay** - A delay period that allows the control panel to be reset, thereby aborting a report to a central station.

**Ambush Code** - A 2-digit code entered when forced to disarm. Sends a silent alarm to the central station.

**Arm** - To turn the system on by entering a User Code at the keypad.

**Arm/Disarm Code** - A personalized code for arming and disarming the system. It may contain up to four digits.

**Battery** - Backup power source in the control-panel enclosure to provide protection in the event of a power failure.

**Central Station** - Monitors incoming reports and emergency messages from a digital communicator and notifies the proper authorities (optional).

**Chime** - A keypad beep while disarmed alerting that the programmed zone has been opened. Chime Zones may have been programmed to display when activated (option).

**Closing** - A report sent to the central station when the premises is closed (system armed) (optional).

**Communicator** - Reports intrusions and emergencies directly to the central station over telephone lines.

**Control Panel** - The brain of the system, it controls all system functions.

**Disarm** - To turn the system off by entering a User Code at the keypad.

**Exit/Entry Delay** - A programmed time that lets you exit and enter your premises without setting off an alarm after the system is armed.

**Instant Protection** - Arming without entry delay while on the premises using Key [4].

**Keypad** - Puts control-panel functions at your fingertips. It can be mounted anywhere in your premises.

**Opening** - A report sent to the central station when the premises is opened (system disarmed) (optional).

**Panic Buttons** - Keys [\*] and [#] on the keypad, pressed at the same time to alert the central station of an emergency.

**Report** - A transmission to a central station specifying a change in the status of the system (alarm, trouble, low battery, etc.) (optional).

**Ringback** - A beep after arming verifying central-station receipt of report.

**Service Code** - A restricted Arm/Disarm Code intended for temporary use.

**Shunt Button (Key [S] on keypad)** - Allows you to manually remove one or more protective zones from the system. (Chime Mode and/or Watch Mode may

also have been programmed to be enabled with this button).

**Sounder** - A local warning device at the keypad to alert that (a) entry delay has started; (b) an attempt was made to arm with a zone in trouble; (c) a Chime Zone or Day Zone was activated; (d) a fire alarm or fire trouble condition exists; or (e) the central station has acknowledged arming (optional).

**Trouble** - An open door, window, or other problem that may prevent arming.

**User Program Code** - A code (up to 6 digits) required to enter the Program Mode in order to program or change Arm/Disarm Codes.

**Watch Mode (option)** - Turns all Day Zones on and off simultaneously by pressing Key [S] twice. (Also see **Group Shunt Zones**, below.)

**Zones** - Independent circuits that protect specific areas of the premises:

- **Auto-Shunt Zone:** A zone that will be automatically bypassed from the protection system if it is in trouble (faulty) when the system is armed.
- **Burglary Zone:** Detects intrusion.
- **Day Zone:** A zone programmed to cause visual and audible indication at the keypad when it is in trouble while disarmed. This feature is generally used to detect a problem, such as a break in a window foil, during the day. If a Day Zone is open, the green STATUS light will flash, the sounder will pulse, and the numerical display will indicate the zone. Hold down Key [9] to silence the sounder and clear the display. Arm and disarm the panel to re-enable the Day Zone. (This feature may have been programmed so that Key [9] will turn off only the sounder; the display will continue to indicate the open zone until the zone is corrected, at which time the display will be cleared and the Day Zone re-enabled.)
- **Exit/Entry Follower Zone:** Provides exit and entry delay for interior devices. Entry delay only occurs if re-entry takes place through the normal exit/entry door.
- **Group Shunt Zones:** Circuits within the premises, usually including space-protection devices, interior doors, etc. (but not exterior doors or windows) that can all be bypassed simultaneously by pressing Key [S] twice. This feature may have been programmed to include the Chime Mode and/or Watch Mode (optional).
- **Never-Armed Zone:** A zone that will remain disarmed, even when the rest of the system is armed. When tripped, it will display at the keypad when Display Status (Hold-Down Function 3) is selected. If Chime is programmed, the keypad will sound while armed or disarmed. This feature may be used as a driveway monitor, pool alert, etc.
- **Priority Zone:** A zone that prevents arming if in trouble.
- **Selective-Shunt Zone:** A zone that can be individually bypassed using Key [S].
- **24-Hour Zone:** A zone that is armed and ready at all times to respond to an emergency situation.

## KEYPAD CONTROLS & INDICATORS

### Numerical Display

- Flashes Digits 1-8 - indicates which non-24-Hour Zones are in an alarm condition, and which Day Zones are in a trouble condition. (Option: can also indicate a Chime Zone.)
- Flashes "P" - indicates a priority condition (armed with a Priority Zone in trouble, armed without resetting a Day Zone, or armed without ac power available to the system).

### ARMED/ALARM (Red) Light

- Steady - system is armed.
- Flashes - alarm on a non-24-Hour Zone.
- Flashes (fast) - entry delay cancelled.

### STATUS (Green) Light

- Steady - system disarmed, all non-24-Hour Zones OK.
- Pulses once every second - trouble on any non-24-Hour Zone.
- Flashes (fast) - trouble on Day Zone.

### SHUNT (Yellow) Light


Steady - one or more zones manually shunted (bypassed). (Dealer-programmable to display Auto-Shunted Zones and bypassed Priority Zones as well.)

### FIRE/FIRE TROUBLE (Bottom Red) Light

Steady - Fire Zone in alarm condition.  
Flashes - Fire Zone in trouble condition.

### Keypad Sounder

- Steady Tone - a priority condition exists.
- Steady Tone (when entering) - entry delay in progress.
- Beep (programmed duration) - "Chime" feature activated.
- Beep (2 seconds) - system armed with a zone in trouble.
- Pulsing - Day Zone or Fire Zone in trouble.  
(To stop sounder "Trouble" warnings, hold down Key [9] for 2 seconds.)

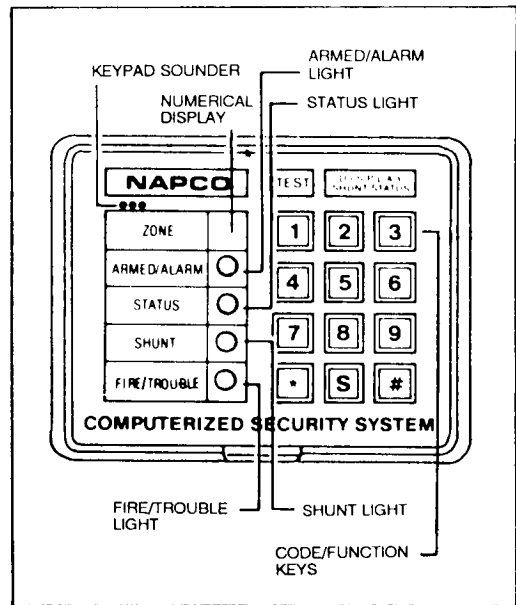

## HOLD-DOWN FUNCTIONS

**NOTE:** To perform designated "Hold-Down" Functions, Keys [1] - [9] and [S] must be held down for 2 seconds (until sounder beeps).

### Key [1]: TEST

Momentarily sounds the burglar alarm. If no alarm is heard, or if it is weak, the battery may need replacing. Make this test weekly. (To perform this function, hold down Key [1] until sounder beeps.)

### Key [2]: DISPLAY SHUNT

Numerically displays zones (1 through 8) that have been shunted using Key [S]. To perform this function, hold down Key [2] until sounder beeps, and continue to hold it down until all zones have been displayed.

### Key [3]: DISPLAY STATUS

Numerically displays zones (1 through 8) that are in "trouble". To perform this function, hold down Key [3] until sounder beeps, and continue to hold it down until all zones have been displayed.

### Key [4]: INSTANT PROTECTION

Cancels entry delay period when arming. The delay is restored after you disarm the system. To perform this function, hold down Key [4] until sounder beeps.

### Key [5]: CHIME

This will enable a feature that sounds a "chime" (beep) at the keypad each time a programmed zone is opened. (This feature may have been programmed to display the zone number as well until the zone is closed.) The Chime Mode functions when the alarm system is disarmed (off), but it will *always* operate on a Never-Armed Zone (see GLOSSARY). To disable the chime feature, hold down Key [5] again (until sounder beeps). (Also see **Bypassing Interior Zones** on page 11.)

### Key [6]: COMMUNICATOR CONFIDENCE TEST

(Applicable only to systems programmed to report to a central station.)

Pressing the key tests your phone lines (the sounder will start to pulse). If the line is good, the pulsing will stop; if not, a steady tone will sound. (To perform this function, hold down Key [6] until sounder beeps.) Reset the sounder using Key [9].

**Key [7]: FAULT FIND**

For installer's use only. (Arming the panel will cancel the Fault-Find Mode.)

**Key [8]: PROGRAM**

Allows you to enter the Program Mode. In this mode, you can program up to 5 personalized User Codes, including a Service Code (optional). Refer to "SELECTING AND PROGRAMMING YOUR CODES" on page 8 for more information. (To perform this function, hold down Key [8] until sounder beeps.)

**Key [9]: RESET**

Resets any sounder indication, ac power-loss indication, Day-Zone indication, Fault-Find Mode, or may be programmed to reset the Fire Zone. After an alarm occurs and the system is disarmed, the numerical display will still indicate which non-24-Hour Zone(s) caused the alarm. Use Key [9] to clear the display. (To perform this function, hold down Key [9] until sounder beeps.)

**Key [S]: SHUNT/ALARM HISTORY**

**NOTE:** Pressed momentarily, manually shunts (bypasses) a zone or zones. Refer to Arming With A Zone In Trouble (page 9) for more information.

**ALARM HISTORY.** This will flash the red ARMED/ALARM light to indicate the last alarm condition. The numerical display will indicate the zones violated. History is not lost when the system is rearmed; the previous alarm history will remain in alarm memory until automatically reset by a new alarm condition. To perform this function, hold down Key [S] until the sounder beeps, then continue to hold it down until all information has been displayed.

**KEYS [\*] and [#]: PANIC BUTTONS**

Momentarily pressing these keys will activate the Panic Zone. Refer to Panic Zone on page 11 for more information.

## SELECTING AND PROGRAMMING YOUR CODES

### User (Arm/Disarm) Codes

You can choose up to 5 different four-digit codes that will allow you to arm and disarm your system. Any of these codes can easily be changed or removed should it become necessary in the future to deny a user access to the premises. Your security system cannot be disarmed by unauthorized persons. It will respond only when a code of your choosing is entered through the keypad.

### Service Code

Your alarm specialist may have programmed User 5's code as a Service Code, a temporary code intended for occasional use only, thus allowing guests, babysitters, service employees, etc. limited access to the control panel. When no longer needed, the code is deactivated.

The Service Code is controlled by User 1. Whenever User 1 enters his code, the Service Code is deactivated. To activate, merely arm using the Service Code. (The Service Code can always be used to arm and, in fact, can be programmed as an arm-only code by your alarm specialist.)

Operation is similar to that of a regular Arm/Disarm Code. When active, it may be used to disarm, unless the panel was armed by User 1.

### Selecting Your Codes

After your alarm specialist installs your system, he will give you a "User Program Code" and show you how to program your User Codes. For optimum security, do not select obvious combinations, such as consecutive numbers, your street or telephone number, birth date, etc., for your personal code.

1. Hold down Key [8] until the sounder beeps. This puts the system into its User Program Mode.
2. Enter your Program Code into the keypad; the top three lights will flash and sounder will pulse. Program up to 5 codes as follows:
  - a. Press Key [S].
  - b. Enter the user number (1-5). (Enter "5" for the Service Code.)
  - c. Enter a four-digit code number (digits 1-9; there is no zero).

#### Examples:

Press [S] + [1] + four digits = User 1's Code

[S] + [5] + four digits = User 5's Code (or Service Code)

You do not have to assign all five codes. Use as many as you need and change them as often as you feel necessary.

To erase any code(s), repeat steps 1, 2a, and 2b. For example, to erase User 3, enter [S] + [3].

3. To end the programming mode, press Key [S] *twice*.



## SETTING THE ALARM (ARMING) WHEN LEAVING

### Checking Ac Power

If the top three lights on the keypad are blinking slowly, you have lost ac power. Check if there has been a general power outage, or if the control-panel power transformer is disconnected. If you must operate without ac power, hold down Key [9] until a beep sounds to stop the lights from blinking, then test your system by holding down Key [1]. If the alarm doesn't sound, or is weak, replace battery. Always test your system weekly.

### Arming Before You Leave

Check the green STATUS light on the keypad. If it is on, enter your code. The red ARMED/ALARM light will come on and the green light will go off. If your system was programmed for an automatic audible test on arming, the alarm will sound briefly shortly after arming.

Leave immediately through the exit/entry door before your exit delay time runs out. If you wait too long, the keypad sounder will warn that the entry delay has started. To avoid causing an alarm, quickly return to the keypad and enter your code to reset the control panel. You may then arm the system again.

### Arming With A Zone In Trouble

A flashing green STATUS light indicates that at least one non-24-Hour Zone is in trouble, that is, the zone is in an "open" or "shorted" condition. If a Day Zone is open, the zone will also display numerically and the sounder will be pulsing. Any zone (1 through 8) in a troubled condition can be displayed numerically by holding down Key [3] until the sounder beeps. Try to fix the zone by closing windows or doors that may be open. If a Day Zone is in trouble, reset the Day-Zone indication by holding down Key [9] until the sounder beeps. (Reset the Day Zone by correcting the condition, then arming and disarming.) If no zones are in trouble, the green light will come on, indicating that the system is ready to be armed.

If a zone cannot be fixed immediately, it may still be possible to arm without the protection of that zone. Check your alarm plan. If Auto-Shunt was programmed for the zone in trouble, simply arm your system. A short beep will sound at the keypad, indicating that a zone has been auto-shunted, that is, it has been bypassed and cannot cause an alarm. (The SHUNT light may have been programmed to come on.)

If the zone is programmed for Selective Shunt, pressing Key [S], and then the number of the zone (1 through 8) will manually shunt that zone. Group-Shunt Zones are a group of zones that can all be manually shunted simultaneously by simply pressing the Key [S] key twice. Hold down Key [2] to numerically display Selective- or Group-Shunted Zones.

You will not be able to arm your system if (a) a zone selected as a Priority Zone is in trouble; (b) a Day-Zone numerical display indication is still flashing; or (c) the top three keypad lights are flashing due to an ac power failure. If you attempt to arm, the sounder will come on and a "P" will be displayed. Enter your code again, and reset the digital display memory or ac-failure indication by holding down Key [9], (remember to test

your system!).

Zones selected for Priority with Bypass may be bypassed by holding down Reset Key [9] before arming. Be sure to have all zones in trouble fixed quickly.

## **TURNING OFF THE ALARM (DISARMING) WHEN RETURNING**

### **Disarming When You Return**

When you enter through the exit/entry door, the sounder will come on for the entire entry period. If, upon entering, the red ARMED/ALARM light is flashing, leave the premises and call authorities from a neighbor's telephone. Disarm the panel quickly using your Arm/Disarm Code.

**NOTE:** If you enter the wrong code, you must wait at least 2 seconds before trying again.

If there has been an alarm on a non-24-Hour Zone, the ARMED/ALARM light will be flashing and the zone number will be displayed, even after you disarm. If you wish to reset the display, hold down Key [9].

When the system is disarmed, the red ARMED/ALARM light will go off and the green light will come on (or flash if a zone is in trouble).

If an alarm occurred on a 24-Hour Zone, there will be no indication at the keypad, however an alarm condition will be recorded by Alarm History (see Key [S]: Alarm History).

### **Ambush Code**

If an intruder forces you to disarm your system, enter your programmed one- or two-digit Ambush Code *before* your Arm/Disarm Code. This activates the Ambush Zone, which will send a silent alarm to a central station. (This is an optional feature.)

## PROTECTING YOURSELF WHILE ON THE PREMISES

### Arming With Zones Shunted

Your alarm specialist may have programmed one or more zones for Selective Shunt, that is, removable from the system. Since a shunted zone cannot cause an alarm, you may wish to use this feature to turn off the interior areas while arming, and keep your perimeter zones (windows, doors, etc.) active.

To arm, check the green light to be sure that no zone is in trouble. Press the shunt button (Key [S]), and then the number of the zone (1 through 8) you wish to shunt. To verify which zones have been shunted, hold down Key [2] until all zones have been displayed.

### Bypassing Interior Zones

Your alarm specialist may have also selected all interior zones to be Group Shunt Zones. Shunt these zones all at the same time by simply pressing Key [S] twice. The yellow SHUNT light will come on whenever you shunt one or more zones. Enter your code to arm remaining zones; the green light will go off and the red ARMED/ALARM light will come on. The yellow light will go off the next time you disarm, indicating that the shunted zones are no longer shunted. (The SHUNT light does not come on when zones are auto-shunted (unless programmed otherwise by your alarm specialist.)


**NOTE:** The Chime Mode may have been programmed to be enabled when group shunting interior zones so that perimeter Chime Zones will automatically sound at the keypad when activated. Similarly, the Watch Mode (see GLOSSARY) may be enabled by group shunting.

### Arming With Instant Protection

Holding down Key [4] (until beep sounds) will cancel the entry delay on the exit/entry zones when arming. The red ARMED/ALARM light will flash rapidly to indicate this condition. If someone enters through an Exit/Entry Zone, an alarm will sound immediately.

### Panic Zone

To activate the Panic Zone, press Keys [\*] and [#] at the same time. The Panic Zone can be programmed to send a silent alarm to a central station, activate an audible alarm, or both.

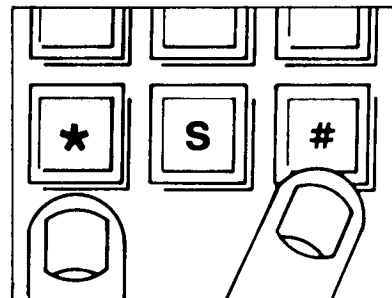

## CENTRAL-STATION MONITORING

Your alarm specialist may have programmed your system to be monitored by a central station. The built-in digital communicator can transmit emergency signals and status reports to the central station 24 hours a day.

### COMMUNICATOR FEATURES

**Abort Delay.** Note which of your zones have *abort* delay, a delay that allows you time to reset the system before it communicates to the central station.


- Regular Burglary (Non-24-Hour) Zone reports are aborted by disarming within the delay period.
- 24-Hour Zones and zones programmed to report restores must be repaired first, then the panel armed and disarmed, all within the delay period.

**Opening and Closing Reporting.** Notifies the central station every time the system is disarmed and armed. Up to 4 different users can each be identified.

**Telephone-Line Test.** To check your telephone connection with the central station hold down Key [6]. After the beep sounds, a pulse tone will be heard from the keypad sounder. If the phone line is good the sound will silence in a few seconds. If not, a continuous tone will sound. The keypad sounder can be silenced by pressing Key [9].

Your alarm specialist may have also programmed your system to automatically send a test signal to the central station every 24 hours.

**Central-Station Ringback.** The central station will acknowledge arming of the system by *ringing back* with a short beep from the keypad sounder.

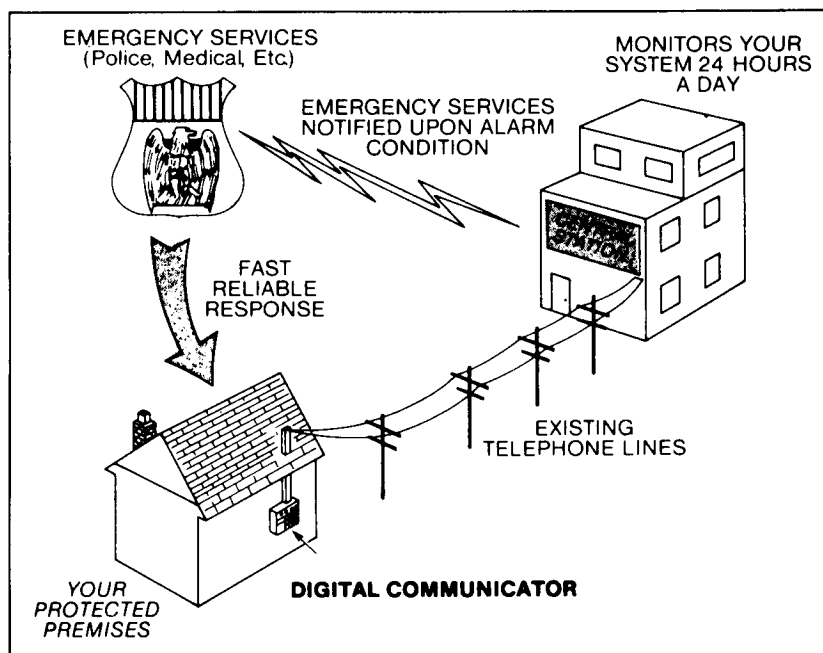

## FIRE PROTECTION

The following information is applicable only where local ordinance permits use of your alarm control panel for fire detection.

### Controlling Your Fire Circuit

If your alarm specialist installed smoke detectors or heat sensing thermostats, you have 24-hour fire protection. Your control panel will constantly monitor this zone for any alarm or trouble condition.

### Fire-Zone Alarm

An alarm on the Fire Zone will cause the bottom red light to come on and the sounder to pulse. The fire alarm will sound, overriding any other alarm.

### Fire-Zone Trouble

If there is trouble on the fire circuit, the bottom red FIRE/TROUBLE light will flash and the sounder will pulse after a 10-second delay. To silence the sounder, press Key [9]. The light will continue to flash to indicate the trouble. After the trouble is repaired, press Key [9] again to turn off the light.

### Resetting After An Alarm

The fire alarm may be reset by arming, and then disarming; or (if so programmed) by waiting for it to automatically shut off. The sounder and the FIRE/TROUBLE light will stay on. Press Key [9] to silence the sounder. The red FIRE/TROUBLE light should go off in about 30 seconds. If smoke has not cleared from a smoke detector, or a thermostat has not cooled, the red FIRE/TROUBLE light will remain on. Press Key [9] every 30 seconds until the condition has cleared and the light goes off.


**NOTE:** If the sounder is on due to a fire or fire-trouble condition, you will not be able to arm the burglar alarm until you silence the sounder by holding down Key [9] until the beep sounds.

### Would You Like More Safety Information?

For information on home fire detection, burn safety, and home fire safety, contact the National Fire Protection Association, Public Affairs Dept. 05A, Batterymarch Plaza, Quincy, MA 02269.

## PREPARING AN ESCAPE PLAN

Even with the most advanced fire alarm system, adequate protection requires an escape plan.

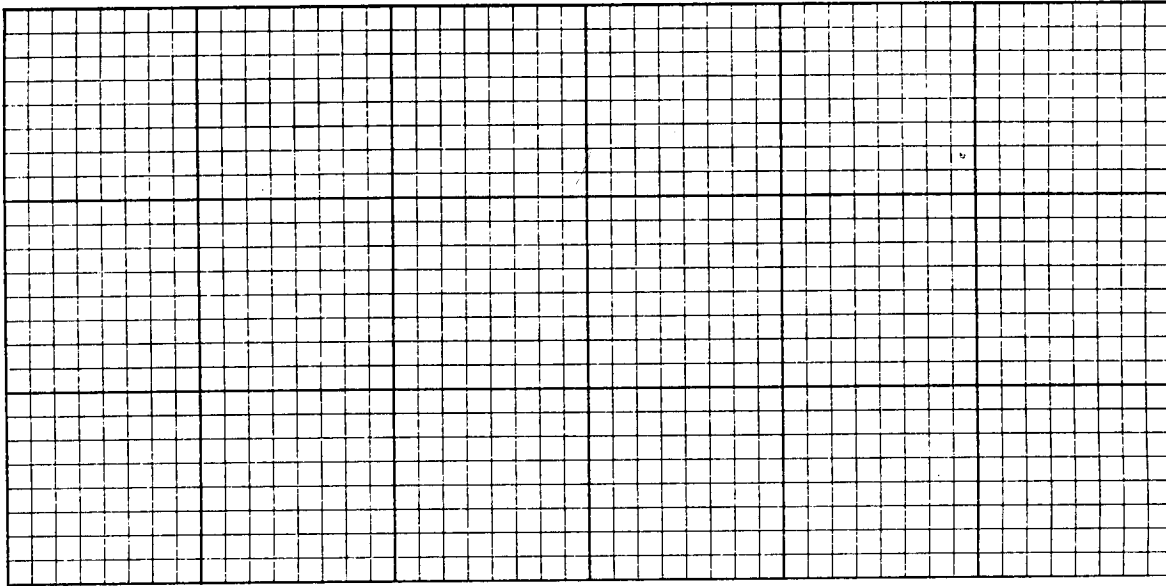

To prepare your plan, draw floor plans of your building. Show two exits -- a front or back door and a window from each room. (Make sure the window works. You may need a special fire escape ladder if the window is high up.) Write down your outside meeting place.

### Family Rehearsal

Rehearse each of the following activities:

1. Everyone in his room with the doors closed.
2. One person sounds the alarm.
3. Each person tests his door.
4. Pretend the door is hot and use the alternate escape exit.
5. Everyone meets outdoors at the assigned spot.

### IMPORTANT! - Read Carefully

Discuss these escape procedures with those who use the building.

1. In a residence, sleep with the bedroom door closed. A closed door will hold back deadly smoke while you escape.
2. When the fire alarm signals, escape quickly. Do not stop to pack.
3. Test the door. If it is hot, use your alternate route through the window. If the door is cool, brace your shoulder against it and open it cautiously. Be ready to slam the door if smoke or heat rush in. Crawl through smoke, holding your breath. Close the doors again on leaving to help prevent the fire from spreading.
4. Go to your specific outdoor meeting place so you can see that everyone is safe.
5. Assign someone to make sure that nobody returns to the burning building.
6. Call the Fire Department from a neighbor's telephone.

### ALARM PLAN

Note the protected area, features, and alarm detection device(s) for each Burglary Zone in the space provided below.

ZONE	AREA PROTECTED	ZONE FEATURES	DETECTION DEVICE(S)
1			
2			
3			
4			
5			
6			
7*			
8*			

\*Applicable to MA1010DL only.

# NAPCO LIMITED WARRANTY

**N**APCO SECURITY SYSTEMS, INC. (NAPCO) warrants its products to be free from manufacturing defects in materials and workmanship for fifteen months following the date of manufacture. NAPCO will, within said period, at its option, repair or replace any product failing to operate correctly without charge to the original purchaser or user.

This warranty shall not apply to any equipment, or any part thereof, which has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to acts of God, or on which any serial numbers have been altered, defaced or removed. Seller will not be responsible for any dismantling or reinstallation charges.

In case of defect, contact the security professional who installed and maintains your security system. NAPCO shall have no obligation under this warranty, or otherwise, if the product has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to accident, nuisance, flood, fire or acts of God, or on which any serial numbers have been altered, defaced or removed. NAPCO will not be responsible for any dismantling, reassembly or reinstallation charges.

In order to exercise the warranty, the product must be returned by the user or purchaser, shipping costs prepaid and insured to NAPCO. After repair or replacement, NAPCO assumes the cost of returning products under warranty.

*There are no warranties, express or implied, which extend beyond the description on the face hereof. There is no express or implied warranty of merchantability or a warranty of fitness for a particular purpose. Additionally, this warranty is in lieu of all other obligations or liabilities on the part of NAPCO.*

Any action for breach of warranty, including but not limited to any implied warranty of merchantability, must be brought within the six months following the end of the warranty period. In no case shall NAPCO be liable to anyone for any consequential or incidental damages for breach of this or any other warranty, express or implied, even if the loss or damage is caused by the seller's own negligence or fault.

*This warranty contains the entire warranty. It is the sole warranty and any prior agreements or representations, whether oral or written, are either merged herein or are expressly cancelled. NAPCO neither assumes, nor authorizes any other person purporting to act on its behalf to modify, to change, or to assume for it, any other warranty or liability concerning its products.*

In no event shall NAPCO be liable for an amount in

excess of NAPCO's original selling price of the product, for any loss or damage, whether direct, indirect, incidental, consequential, or otherwise arising out of any failure of the product. Seller's warranty, as hereinabove set forth, shall not be enlarged, diminished or affected by and no obligation or liability shall arise or grow out of Seller's rendering of technical advice or service in connection with Buyer's order of the goods furnished hereunder.

**NAPCO RECOMMENDS THAT THE ENTIRE SYSTEM BE COMPLETELY TESTED WEEKLY.**

**Warning:** Despite frequent testing, and due to, but not limited to, any or all of the following; criminal tampering, electrical or communications disruption, it is possible for the system to fail to perform as expected. NAPCO does not represent that the product/system may not be compromised or circumvented; or that the product or system will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; nor that the product or system will in all cases provide adequate warning or protection. A properly installed and maintained alarm may only reduce risk of burglary, robbery, fire or otherwise but it is not insurance or a guarantee that these events will not occur. **CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE, OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING.** Therefore, the installer should in turn advise the consumer to take any and all precautions for his or her safety including, but not limited to, fleeing the premises and calling police or fire department, in order to mitigate the possibilities of harm and/or damage.

NAPCO is not an insurer of either the property or safety of the user's family or employees, and limits its liability for any loss or damage including incidental or consequential damages to NAPCO's original selling price of the product regardless of the cause of such loss or damage. If the user wishes to protect itself to a greater extent, NAPCO will, at user's sole cost and expense, obtain an insurance policy to protect the user, supplemental to user's own policy, at a premium to be determined by NAPCO's insurer upon written notice from user by Certified Mail, Return Receipt Requested, to NAPCO's home office address, and upon payment of the annual premium cost by user.

Some states do not allow limitations on how long an implied Warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, or differentiate in their treatment of limitations of liability for ordinary or gross negligence, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.